

# FILM INSTALLATION GUIDELINES

ARCHITECTURAL WINDOW FILMS

Note: Reference Installation Guidelines - Definition for detailed explanation of the following calculation table

### Primary Stress

	Clear Single Pane			Clear Dual Pane			Clear Triple Pane			Tinted Single Pane			Tinted Dual Pane			Low-E Dual Pane		
	1/8"	1/4"	3/8"	1/8"	1/4"	3/8"	1/8"	1/4"	3/8"	1/8"	1/4"	3/8"	1/8"	1/4"	3/8"	1/8"	1/4"	3/8"
<b>Ultra-Vision DS</b>																		
ULVDS 70	5	5	6	5	5	6	10	10	13	6	6	7	5	5	6	7	7	8
ULVDS 50	5	5	6	5	5	6	12	12	NR	6	6	7	5	5	6	7	7	8
ULVDS 40	6	6	7	6	6	7	14	14	NR	7	7	8	6	6	7	8	8	9
<b>Symphony DS</b>																		
SYDS 50	5	5	6	7	7	8	8	8	10	6	6	7	7	7	8	7	7	9
SYDS 35	5	5	6	7	7	8	8	8	10	7	7	8	7	7	8	7	7	8
SYDS 25	5	5	6	9	9	10	10	10	12	7	7	8	7	7	8	9	9	10
SYDS 15	6	6	7	7	7	8	10	10	12	8	8	9	8	8	9	9	9	10
<b>Dual-Reflective DS</b>																		
DRDS 35	6	6	7	8	8	9	9	9	12	6	6	7	5	5	6	8	8	9
DRDS 25	6	6	7	10	10	11	12	12	14	8	8	9	5	5	6	10	10	11
DRDS 15	6	6	7	9	9	10	11	11	13	7	7	8	8	8	9	9	9	10
<b>Infinity DS</b>																		
IDS 50 Neutral	5	5	6	7	7	8	9	9	10	7	7	8	6	6	7	7	7	8
IDS 35 Neutral	6	6	7	9	9	10	11	11	12	7	7	8	8	8	9	9	9	10
IDS 20 Neutral	7	7	8	11	11	12	12	12	14	8	8	9	11	11	12	11	11	12
IDS 35 Bronze	5	5	6	6	6	7	8	8	10	6	6	7	7	7	8	7	7	8
IDS 20 Bronze	5	5	6	7	7	8	9	9	11	7	7	8	7	7	8	9	9	10
<b>Silver DS</b>																		
SDS 35	4	4	5	5	5	6	6	6	8	7	7	8	7	7	8	7	7	8
SDS 20	5	5	6	6	6	7	7	7	9	8	8	9	9	9	10	9	9	10
<b>Safety/Security</b>																		
8.5M ULV 40	6	6	7	6	6	7	14	14	NR	7	7	8	7	7	8	7	7	8
8.5M SY 50	5	5	6	7	7	8	8	8	10	6	6	7	7	7	8	7	7	9
6M SY 25 & 8.5M SY 25	5	5	6	9	9	10	10	10	12	7	7	8	7	7	8	9	9	10
4M, 6M & 8.5M SY 35	5	5	6	7	7	8	8	8	10	7	7	8	7	7	8	7	7	8
4M SY 65	4	5	5	5	6	6	7	7	9	5	6	6	5	6	6	6	7	7
4M & 8M Silver 20	5	5	6	6	6	7	7	7	9	8	8	9	9	9	10	9	9	10
4M, 6M Anti-Graffiti	1	1	2	2	2	3	4	4	5	3	3	4	4	4	5	2	2	3
2M to 13M Clear	1	1	2	2	2	3	4	4	5	3	3	4	4	4	5	2	2	3
<b>Specialty Films</b>																		
Black Out	16	16	16	NR	NR	NR	NR	NR	NR	16	16	16	NR	NR	NR	NR	NR	NR
White Out	6	6	7	9	9	10	11	11	13	7	7	8	8	8	9	9	9	10
White Matte	5	5	5	7	7	7	8	8	8	7	7	7	7	7	7	8	8	8
Crystal PET	1	1	2	2	2	3	4	4	5	3	3	4	4	4	5	2	2	3
Crystal Vinyl	1	1	2	2	2	3	4	4	5	3	3	4	4	4	5	2	2	3
DR Mirror 7 DS/PS	5	5	6	7	7	8	8	8	10	7	7	8	7	7	8	9	9	10

Please refer to "SunTek Window Films/Residential and Commercial Limited Warranty/Glass Breakage and Seal Failure Limited Warranty" for details of the warranty coverage. Please note that applications to Triple Pane Glass are not covered by this warranty.

### Additional Stress

<b>Summer Temperature</b>		<b>Defective Glass</b>		<b>Pane Size</b>		<b>Frame Condition</b>		<b>Shading</b>	
109° to 115° (43° C)	1	badly scratched	2	40 to 50 sq ft	1	steel or concrete frame	1	straight shadow	1
over 115°	2	chipped edges	NR	51 to 100 sq ft	2	deteriorated rubber gasket	1	"L" shaped shadow	2
				Over 100 sq ft	NR	no rubber gasket	2	"T" or "V" shaped shadow	3
<b>Altitude</b>		<b>Window Treatment Distance</b>							
2000 to 5000 ft	1	less than 5 inches (50mm - 150mm)		1					
5000 ft and above	2								

**Add: "Primary Stress"** \_\_\_\_\_ **+** **"Additional Stress"** \_\_\_\_\_ **= Total Stress Factors for Installation** \_\_\_\_\_

10 or less = any glass

14 or less = heat strengthened glass

18 or less = tempered glass

19 or higher = not recommended (NR)

# FILM INSTALLATION GUIDELINES

## ARCHITECTURAL WINDOW FILMS

Note: Reference Installation Guidelines - Definition for detailed explanation of the following calculation table

	Primary Stress														
	HP Low-E Dual Pane			Clear Single Pane Laminated			Clear Dual Pane Laminated			Tinted Single Pane Laminated			Tinted Dual Pane Laminated		
	1/8"	1/4"	3/8"	1/8"	1/4"	3/8"	1/8"	1/4"	3/8"	1/8"	1/4"	3/8"	1/8"	1/4"	3/8"
<b>Ultra-Vision DS</b>															
ULVDS 70	3	3	4	5	5	6	5	5	6	6	6	7	5	5	6
ULVDS 50	3	3	4	5	5	6	5	5	6	6	6	7	5	5	6
ULVDS 40	4	4	5	6	6	7	6	6	7	7	7	8	6	6	7
<b>Symphony DS</b>															
SYDS 50	4	4	5	5	5	6	7	7	8	6	6	7	7	7	8
SYDS 35	5	5	6	5	5	6	7	7	8	7	7	8	7	7	8
SYDS 25	5	5	6	5	5	6	9	9	10	7	7	8	7	7	8
SYDS 15	5	5	6	6	6	7	7	7	8	8	8	9	8	8	9
<b>Dual-Reflective DS</b>															
DRDS 35	4	4	5	6	6	7	8	8	9	6	6	7	5	5	6
DRDS 25	4	4	5	6	6	7	10	10	11	8	8	9	5	5	6
DRDS 15	4	4	5	6	6	7	9	9	10	7	7	8	8	8	9
<b>Infinity DS</b>															
IDS 50 Neutral	4	4	5	5	5	6	7	7	8	7	7	8	6	6	7
IDS 35 Neutral	5	4	5	6	6	7	9	9	10	7	7	8	8	8	9
IDS 20 Neutral	5	4	5	7	7	8	11	11	12	8	8	9	11	11	12
IDS 35 Bronze	4	4	5	5	5	6	6	6	7	6	6	7	7	7	8
IDS 20 Bronze	5	4	5	5	5	6	7	7	8	7	7	8	7	7	8
<b>Silver DS</b>															
SDS 35	4	4	5	4	4	5	5	5	6	7	7	8	7	7	8
SDS 20	4	4	5	5	5	6	6	6	7	8	8	9	9	9	10
<b>Safety/Security</b>															
8.5M ULV 40	4	4	5	6	6	7	6	6	7	7	7	8	7	7	8
8.5M SY 50	4	4	5	5	5	6	7	7	8	6	6	7	7	7	8
6M SY 25 & 8.5M SY 25	5	5	6	5	5	6	9	9	10	7	7	8	7	7	8
4M, 6M & 8.5M SY 35	4	4	5	5	5	6	7	7	8	7	7	8	7	7	8
4M SY 65	4	4	5	4	5	5	5	6	6	5	6	6	5	6	6
4M & 8M Silver 20	4	4	5	5	5	6	6	6	7	8	8	9	9	9	10
4M, 6M Anti-Graffiti	3	3	4	1	1	2	2	2	3	3	3	4	4	4	5
2M to 13M Clear	3	3	4	1	1	2	2	2	3	3	3	4	4	4	5
<b>Specialty Films</b>															
Black Out	NR	NR	NR	16	16	16	NR	NR	NR	16	16	16	NR	NR	NR
White Out	4	4	5	6	6	7	9	9	10	7	7	8	8	8	9
White Matte	6	6	7	5	5	5	7	7	7	7	7	7	7	7	7
Crystal PET	3	3	4	1	1	2	2	2	3	3	3	4	4	4	5
Crystal Vinyl	3	3	4	1	1	2	2	2	3	3	3	4	4	4	5
DR Mirror 7 DS/PS	4	4	5	5	5	6	7	7	8	7	7	8	7	7	8

Please refer to "SunTek Window Films/Residential and Commercial Limited Warranty/Glass Breakage and Seal Failure Limited Warranty" for details of the warranty coverage. Please note that applications to Triple Pane Glass are not covered by this warranty.

Additional Stress														
Summer Temperature	Defective Glass	Pane Size	Frame Condition	Shading										
109° to 115° (43° C)	1	badly scratched	2	40 to 50 sq ft	1	steel or concrete frame	1	straight shadow	1					
over 115°	2	chipped edges	NR	51 to 100 sq ft	2	deteriorated rubber gasket	1	"L" shaped shadow	2					
				Over 100 sq ft	NR	no rubber gasket	2	"T" or "V" shaped shadow	3					
Altitude	Window Treatment Distance													
2000 to 5000 ft	1	less than 5 inches (50mm - 150mm)	1											
5000 ft and above	2													

**Add: "Primary Stress"** \_\_\_\_\_ **+** **"Additional Stress"** \_\_\_\_\_ **= Total Stress Factors for Installation** \_\_\_\_\_

10 or less = any glass                      14 or less = heat strengthened glass                      18 or less = tempered glass                      19 or higher = not recommended (NR)

## FILM INSTALLATION GUIDELINES

### Definitions:

**Thermal Stress Fracture** – Solar control films help reduce heat gains by absorbing and rejecting solar energy, thus allowing less heat to enter through the glazing unit. Improper selection and use of solar control films can cause extreme thermal expansion and stress to the glazing unit resulting in possible glass breakage and/or seal failure to insulated glass. It is important to know how each film and glazing unit combinations will react when installed. For assistance, SunTek® Window Films has prepared guidelines for safe film to glass installations (refer to Installation Guidelines-Calculations report).

**Calculating the Stress Factors** – There are two stress factors that must be calculated to help prevent glass breakage and/or seal failure to insulated glass, the **Primary Stress** and **Additional Stress**. First, using the Primary Stress Factors (under the Installation Guidelines-Calculations report) choose the film and size and type of glazing unit that will have film installed. The numbers displayed represent the combination of the film and glazing unit temperature, with the higher the number the greater the absorption. Next, add up all of the **Additional Stress**. These numbers will include variables such as Summer Temperature, Shading, Frame Conditions, Altitude, Pane Size and Window Treatments. For instance, if the condition of the glazing unit in question has a “L” shaped shadow, add 2; if pane size is over 100 square feet, add 2, if glazing unit has chipped edges, add 3; giving a total of 7 for Additional Stress Factors. Finally, add the **Primary Stress** to the **Additional Stress** to get the **Total Stress** for the chosen film applied to the glazing unit. Tempered glazing units always have a symbol, so if there is no symbols in one of the corners then presume glazing unit is annealed. For the examples stated, add 5 (SYDS 50 on 3/8” clear single pane) plus 7 (“L” shaped shadow, pane size over 100 sq ft, and chipped edges) equals a total of 12 for Total Stress Factor. This example shows that the SYDS 50 can be applied to heat strengthen or tempered glazing units.

\*There is no warranty on glazing units that are 1/2” thick or thicker, wired glass or triple pane glass.

\*Any questions concerning film to glass installation guidelines call the manufacturer toll free at 888-321-5111.

### Descriptions of Additional Stress

**Summer Temperature** is normal summer air temperature.

**Window Treatments** such as blinds and dark drapes cause more heat to be trapped around the window causing additional stress.


**Frame Conditions** will affect how much expansion there is to glass. Rigid frames, deteriorated gaskets, direct metal to glass contact, no gaskets or sealant increase additional stress to glazing unit’s pane as it swells.

**Defective glass** is hard to find unless there is visible cracks and chips. Most flaws are hidden inside the pane where the glazing unit has chipped edges. Curved windows are almost always chipped or have ragged edges causing them to be a weaker glazing unit than straight edges.


**Altitude** high above sea level can cause additional stress because morning sunlight will heat up glazing units faster than normal.

**Pane Size** becomes larger, additional stress increases.


**Shading** causes disproportionate heating. This influences certain geographical areas more than others. There are three different types of shading that can be combined together (vertical, horizontal, or diagonal).

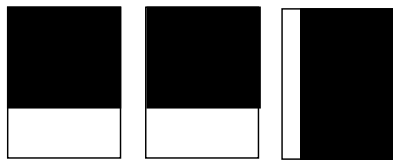

“Straight shadow” category

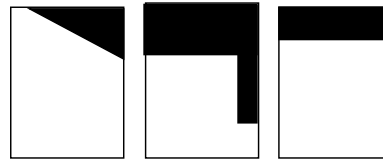

“L shaped shadow” category

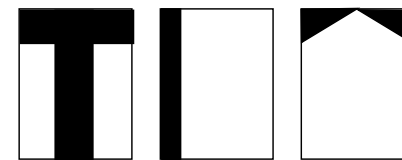

“T or V shaped shadow” category

# FILM INSTALLATION GUIDELINES

## ARCHITECTURAL EXTERIOR WINDOW FILMS

**Note: Reference Installation Guidelines - Definition for detailed explanation of the following calculation table**

		Primary Stress																	
		Clear Single Pane			Clear Dual Pane			Clear Triple Pane			Tinted Single Pane			Tinted Dual Pane			Low-E Dual Pane		
		1/8"	1/4"	3/8"	1/8"	1/4"	3/8"	1/8"	1/4"	3/8"	1/8"	1/4"	3/8"	1/8"	1/4"	3/8"	1/8"	1/4"	3/8"
<b>Ultra-Vision</b>																			
ULV EXT 50		6	6	7	6	6	7	8	8	9	6	6	7	6	6	7	8	8	9
<b>Infinity</b>																			
IXT 35		6	6	7	6	6	7	8	8	9	6	6	7	6	6	7	8	8	9
IXT 20		4	4	5	5	5	6	6	6	7	4	4	5	5	5	6	6	6	7
<b>Silver</b>																			
SXT 50		3	3	4	4	4	5	5	5	6	3	3	4	4	4	5	5	5	6
SXT 35		3	3	4	4	4	5	5	5	6	3	3	4	4	4	5	5	5	6
SXT 20		3	3	4	4	4	5	5	5	6	3	3	4	4	4	5	5	5	6

SunTek's Exterior Series of window film products are designed for installation on the exterior surface of annealed, heat strengthened, or tempered glass. Please refer to "SunTek Window Films/Residential and Commercial Exterior Films Limited Warranty/Glass Breakage and Seal Failure Limited Warranty" for details of the warranty coverage.

### Additional Stress

<b>Summer Temperature</b>		<b>Defective Glass</b>		<b>Pane Size</b>		<b>Frame Condition</b>		<b>Shading</b>	
109° to 115° (43° C)	1	badly scratched	2	40 to 50 sq ft	1	steel or concrete frame	1	straight shadow	1
over 115°	2	chipped edges	NR	51 to 100 sq ft	2	deteriorated rubber gasket	1	"L" shaped shadow	2
				Over 100 sq ft	NR	no rubber gasket	2	"T" or "V" shaped shadow	3
<b>Altitude</b>		<b>Window Treatment Distance</b>							
2000 to 5000 ft	1	less than 5 inches (50mm - 150mm)		1					
5000 ft and above	2								

**Add: "Primary Stress"** \_\_\_\_\_ **+** **"Additional Stress"** \_\_\_\_\_ **= Total Stress Factors for Installation** \_\_\_\_\_

10 or less = any glass

14 or less = heat strengthened glass

18 or less = tempered glass

19 or higher = not recommended (NR)

# FILM INSTALLATION GUIDELINES

## ARCHITECTURAL EXTERIOR WINDOW FILMS

**Note:** Reference Installation Guidelines - Definition for detailed explanation of the following calculation table

### Primary Stress

	HP Low-E Dual Pane			Clear Single Pane Laminated			Clear Dual Pane Laminated			Tinted Single Pane Laminated			Tinted Dual Pane Laminated		
	1/8"	1/4"	3/8"	1/8"	1/4"	3/8"	1/8"	1/4"	3/8"	1/8"	1/4"	3/8"	1/8"	1/4"	3/8"
<b>Ultra-Vision</b> ULV EXT 50	8	8	9	6	6	7	6	6	7	6	6	7	6	6	7
<b>Infinity</b> IXT 35 IXT 20	8 6	8 6	9 7	6 4	6 4	7 5	6 5	6 5	7 6	6 4	6 4	7 5	6 5	6 5	7 6
<b>Silver</b> SXT 50 SXT 35 SXT 20	5 5 5	5 5 5	6 6 6	3 3 3	3 3 3	4 4 4	4 4 4	4 4 4	5 5 5	3 3 3	3 3 3	4 4 4	4 4 4	4 4 4	5 5 5

SunTek's Exterior Series of window film products are designed for installation on the exterior surface of annealed, heat strengthened, or tempered glass. Please refer to "SunTek Window Films/Residential and Commercial Exterior Films Limited Warranty/Glass Breakage and Seal Failure Limited Warranty" for details of the warranty coverage.

### Additional Stress

<b>Summer Temperature</b> 109° to 115° (43° C) over 115°	1 2	<b>Defective Glass</b> badly scratched chipped edges	2 NR	<b>Pane Size</b> 40 to 50 sq ft 51 to 100 sq ft Over 100 sq ft	1 2 NR	<b>Frame Condition</b> steel or concrete frame deteriorated rubber gasket no rubber gasket	1 1 2	<b>Shading</b> straight shadow "L" shaped shadow "T" or "V" shaped shadow	1 2 3
<b>Altitude</b> 2000 to 5000 ft 5000 ft and above	1 2	<b>Window Treatment Distance</b> less than 5 inches (50mm - 150mm)	1						

**Add: "Primary Stress" \_\_\_\_\_ + "Additional Stress" \_\_\_\_\_ = Total Stress Factors for Installation \_\_\_\_\_**

10 or less = any glass

14 or less = heat strengthened glass

18 or less = tempered glass

19 or higher = not recommended (NR)

## FILM INSTALLATION GUIDELINES

### Definitions:

**Thermal Stress Fracture** – Solar control films help reduce heat gains by absorbing and rejecting solar energy, thus allowing less heat to enter through the glazing unit. Improper selection and use of solar control films can cause extreme thermal expansion and stress to the glazing unit resulting in possible glass breakage and/or seal failure to insulated glass. It is important to know how each film and glazing unit combinations will react when installed. For assistance, SunTek® Window Films has prepared guidelines for safe film to glass installations (refer to Installation Guidelines-Calculations report).

**Calculating the Stress Factors** – There are two stress factors that must be calculated to help prevent glass breakage and/or seal failure to insulated glass, the **Primary Stress** and **Additional Stress**. First, using the Primary Stress Factors (under the Installation Guidelines-Calculations report) choose the film and size and type of glazing unit that will have film installed. The numbers displayed represent the combination of the film and glazing unit temperature, with the higher the number the greater the absorption. Next, add up all of the **Additional Stress**. These numbers will include variables such as Summer Temperature, Shading, Frame Conditions, Altitude, Pane Size and Window Treatments. For instance, if the condition of the glazing unit in question has a “L” shaped shadow, add 2; if pane size is over 100 square feet, add 2, if glazing unit has chipped edges, add 3; giving a total of 7 for Additional Stress Factors. Finally, add the **Primary Stress** to the **Additional Stress** to get the **Total Stress** for the chosen film applied to the glazing unit. Tempered glazing units always have a symbol, so if there is no symbols in one of the corners then presume glazing unit is annealed. For the examples stated, add 5 (SYDS 50 on 3/8” clear single pane) plus 7 (“L” shaped shadow, pane size over 100 sq ft, and chipped edges) equals a total of 12 for Total Stress Factor. This example shows that the SYDS 50 can be applied to heat strengthen or tempered glazing units.

\*There is no warranty on glazing units that are 1/2” thick or thicker, wired glass or triple pane glass.

\*Any questions concerning film to glass installation guidelines call the manufacturer toll free at 888-321-5111.

### Descriptions of Additional Stress

**Summer Temperature** is normal summer air temperature.

**Window Treatments** such as blinds and dark drapes cause more heat to be trapped around the window causing additional stress.


**Frame Conditions** will affect how much expansion there is to glass. Rigid frames, deteriorated gaskets, direct metal to glass contact, no gaskets or sealant increase additional stress to glazing unit’s pane as it swells.

**Defective glass** is hard to find unless there is visible cracks and chips. Most flaws are hidden inside the pane where the glazing unit has chipped edges. Curved windows are almost always chipped or have ragged edges causing them to be a weaker glazing unit than straight edges.


**Altitude** high above sea level can cause additional stress because morning sunlight will heat up glazing units faster than normal.

**Pane Size** becomes larger, additional stress increases.


**Shading** causes disproportionate heating. This influences certain geographical areas more than others. There are three different types of shading that can be combined together (vertical, horizontal, or diagonal).

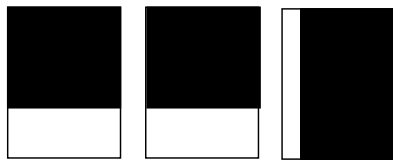

“Straight shadow” category

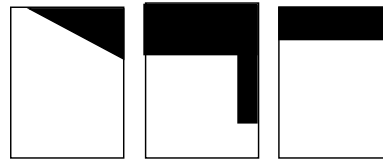

“L shaped shadow” category

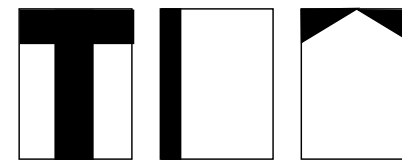

“T or V shaped shadow” category